

ULTRASONIC ANTIFOULING SMART MODULAR 2-6 User Manual

```

--MAIN--
15: 46
MBOX: 1  TRNS: 6
12.8V 0.21A T: 31°C
*SETTINGS
SWITCH OFF
    
```

Use ▲/▼ button to move, ■ button to select.
Use ■ button to go to settings.

```

--SETTINGS--
*MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--MBOX_SETUP--
*SET MBOX PARAMS
ADD NEW MBOX
REMOVE MBOX
RENAME MBOX
(BACK)
(MAIN)
    
```

Use ■ button to go to main boxes setup.
Use ■ button to set main box parameters.

```

--SELECT_MBOX--
*MBOX1
(BACK)
(MAIN)
    
```

Use ■ button to select main box.
Use ▲/▼ button to go back or to main menu.

```

--MBOX_1--
*TR1
TR2
TR3
TR4
TR5
TR6
MODE
(BACK)
(MAIN)
    
```

Use ▲/▼ button to move and ■ button to select transducer.

```

--MBOX_1/TR1--
*PROGRAM
TIMERS
POWER 03
FREQ AUTO
RENAME
(BACK)
(MAIN)
    
```

Use ■ button to go to programming of transducer working time.

```

--MBOX_1/TR1--
*PROG1 |06:00 |21:00
PROG2 |00:00 |00:00
PROG3 |00:00 |00:00
PROG4 |00:00 |00:00
PROG5 |00:00 |00:00
PROG6 |00:00 |00:00
(BACK)
(MAIN)
    
```

Use ■ button to move ▲ button to change.
Example: ON at 6:00, OFF at 21:00.
Use ▼ button to go to (BACK) and ■ button to select.

```

--MBOX_1/TR1--
PROGRAM
TIMERS
POWER 03
FREQ AUTO
RENAME
(BACK)
(MAIN)
    
```

Use ▼ button to go to timers and ■ button to select.

```

--MBOX_1/TR1--
*WORK 10.0s
PAUSE 01.0s
(BACK)
(MAIN)
    
```

Use ■ button to move ▲/▼ button to change working/pause interval.
Example: work 10 seconds, pause 1 second.

```

--MBOX_1/TR1--
PROGRAM
TIMERS
POWER 03
FREQ AUTO
RENAME
(BACK)
(MAIN)
    
```

Use ▼ button to go to power and ■ button to select.

```

--MBOX_1/TR1--
*POWER 03
(BACK)
(MAIN)
    
```

Use ■ button to move ▲/▼ button to change the power of transducer from 01 to 10.

```

--MBOX_1/TR1--
PROGRAM
TIMERS
POWER 03
FREQ AUTO
RENAME
(BACK)
(MAIN)
    
```

Use ▼ button to go to frequency settings and ■ button to select.

```

--MBOX_1/TR1--
*AUTO SWEEP
PREVENTION CLEANING
    
```

Use ▲/▼ button to move and ■ button to select frequency mode.

```

--MBOX_1/TR1--
PROGRAM
TIMERS
POWER 03
FREQ AUTO
RENAME
(BACK)
(MAIN)
    
```

Use ▼ button to go to RENAME and ■ button to select.

```

--RENAME_TRANSDUCER--
)TR1 (
    
```

Use ▲/▼ button to change and ■ button to select character.
Use ▼ button to go to (BACK) and ■ button to select.

```

--MBOX_1--
TR1
TR2
TR3
TR4
TR5
*MODE
(BACK)
(MAIN)
    
```

Use ▼ button to go to MODE and ■ button to select.

```

--MODE--
*SEQUENTIAL
RANDOM
    
```

Use ▲/▼ button to move and ■ button to select the mode.

```

--MBOX_SETUP--
SET MBOX PARAMS
ADD NEW MBOX
REMOVE MBOX
RENAME MBOX
(BACK)
(MAIN)
    
```

Use ▼ button to go to ADD NEW MBOX and ■ button to select.

```

--SEARCHING_MBOX--
*(CANCEL)
    
```

```

--MBOX_SETUP--
SET MBOX PARAMS
ADD NEW MBOX
REMOVE MBOX
RENAME MBOX
(BACK)
(MAIN)
    
```

Use ▼ button to go to REMOVE MBOX and ■ button to select.

```

--SELECT_MBOX--
*MBOX1
(BACK)
(MAIN)
    
```

Use ▲/▼ button to move and ■ button to select main box you want to remove.

```

--REMOVE_MBOX--
MBOX1
*(CANCEL)
(CONFIRM)
    
```

Use ▲/▼ button to move and ■ button to select cancel or confirm the removal of main box.
Use ▲/▼ button to go to (BACK) and ■ button to select.

```

--MBOX_SETUP--
SET MBOX PARAMS
ADD NEW MBOX
REMOVE MBOX
RENAME MBOX
(BACK)
(MAIN)
    
```

Use ▼ button to go to RENAME MBOX and ■ button to select.

```

--SELECT_MBOX--
*MBOX1
(BACK)
(MAIN)
    
```

Use ▲/▼ button to move and ■ button to select main box you want to rename.

```

--RENAME_MBOX--
)MBOX1 (
    
```

Use ▲/▼ button to change and ■ button to select character.
Use ▼ button to go to (BACK) and ■ button to select.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--BACKLIGHT--
*MODE AUTO
LEVEL 3
(BACK)
(MAIN)
    
```

Use ▼ button to go to display backlight setup.
Use ■ button to set mode.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--BACKLIGHT--
*AUTO ON
OFF
    
```

Use ▲/▼ button to move and ■ button to select backlight mode.
Use ▼ button to go to (BACK) and ■ button to select.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--BACKLIGHT--
MODE AUTO
*LEVEL 3
(BACK)
(MAIN)
    
```

Use ▼ button to go to LEVEL and ■ button to select. Use ▲/▼ button to change and ■ button to select the level of backlight.
Use ▼ button to go to (BACK) and ■ button to select.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--LANGUAGE--
SLO
*ENG
ESP
CRO
DE
FR
IT
    
```

Use ▼ button to go to language settings and ■ button to select.
Use ▲/▼ button to move and ■ button to select language.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--CLOCK--
15: 46: 00
*SET CLOCK
(BACK)
(MAIN)
    
```

Use ▼ button to go to clock settings and ■ button to select.
Use ■ button to set clock.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--CLOCK--
15: 46: 00
15: 46: 00
    
```

Use ■ button to move ▲/▼ button to change hour:minute:second.
Use ▼ button to go to (BACK) and ■ button to select.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--ALARM_SOUND--
*ON
OFF
    
```

Use ▼ button to go to alarm sound settings and ■ button to select.
Use ▲/▼ button to move and ■ button to set alarm sound.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--SERVICE_LOCK--
ON
*OFF
    
```

Use ▼ button to go to service lock settings and ■ button to select.
Use ▲/▼ button to move and ■ button to set service lock.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--AC_HIGH_POWER--
*ON
OFF
    
```

Use ▼ button to go to AC high power settings and ■ button to select.
Use ▲/▼ button to move and ■ button to set AC high power.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--TRANSD_OFF--
*NO
YES
    
```

Use ▼ button to go to transducer off and ■ button to select.
Use ▲/▼ button to move and ■ button to set.

```

--SETTINGS--
MBOXES SETUP
BACKLIGHT
LANGUAGE
CLOCK
ALARM SOUND
SERVICE LOCK
AC HIGH POWER
TRANSD. OFF
STATUS
SERVICE
(BACK)
    
```

```

--STATUS--
*)MBOX1((
ADDR: 0  TRNS: 6
RF_STATUS: OK
12.8V 0.21A T: 31°C
(BACK)
(MAIN)
    
```

Use ▼ button to go to status and ■ button to select.

```

--MAIN--
### ERROR! ###
LOW VOLTAGE
10.5V 0.21A T: 31°C
*SETTINGS
SWITCH OFF
    
```

```

--MAIN--
### ERROR! ###
RF NETWORK: MBOX1
12.8V 0.21A T: 31°C
*SETTINGS
SWITCH OFF
    
```